

Multicade


Place multicade wherever you want it to go.

On the back of the machine there is a power cord, run the power to an outlet or an extension cord and plug it in.

Once plugged in, on the top of the machine there is a power switch. Turn that switch on.

Once on you should be able to select a game and play.

Once in a game, if you want to get back to the menu to pick games, hold the white One Player button on the front of the machine for five seconds.

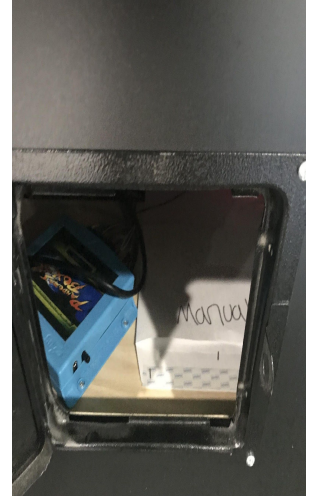


If you need to add or remove a game from the options of the list of games, on the front of the machine there is a little compartment.

Inside that compartment, there is a blue box, press the black button that is on the blue box.

Now scroll down and press A to add or remove the game.

Once down hit the back button, then scroll down to save settings.

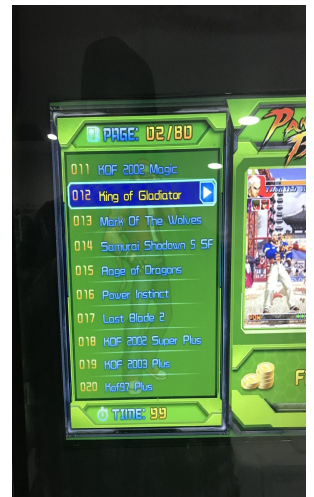



B BACK THUMB STUDIO